

# Boom! Audio 20S EVO Quick Reference

Type	Operation	Button Command	Voice Command	LED
Basic Function	Power-on	Press the Phone Button and the Jog Dial for 1 second.	-	Solid blue
	Power-off	Press the Phone Button and the Jog Dial.	-	Solid red
	Volume adjustment	Rotate the Jog Dial.	-	-
	Voice command	Double tap the surface of the main unit / Tap the Ambient Mode Button	<b>"Hello Sena!"</b>	Green flashing
	Ambient mode	Double tap the Ambient Mode Button.	-	Green flashing
Mobile Phone	Phone pairing	Press the Phone Button for 5 seconds.	-	Blue & red alternatively flashing
	Second mobile phone pairing	Press the Jog Dial for 6 seconds.	-	Red flashing
		Tap the Phone Button within 2 seconds.		
	GPS pairing	Press the Jog Dial for 6 seconds.	-	Red flashing
		Tap the Phone Button within 2 seconds.		
		Tap the Phone Button again within 2 seconds.		
	Answer & end phone call	Tap the Phone Button or the Jog Dial.	-	-
	Reject incoming call	Press the Jog Dial for 2 seconds.	-	-
	Call transfer	Press the Phone Button for 2 seconds.	-	-
Voice dial	Tap the Phone Button.	-	-	
Speed dial	Double tap the Phone Button.	<b>"Speed dial [one, two, three]"</b>	-	
Intercom	Intercom pairing	Press the Jog Dial for 6 seconds.	<b>"Pairing intercom"</b>	Red flashing
		Tap the Jog Dial of any one of the two headsets.		
	Universal intercom pairing	Universal intercom pairing is in the Configuration Menu.		
	Start / End each intercom	Tap the Jog Dial.	<b>"Intercom [one, two ... nine]"</b>	-
	End all intercoms	Press the Jog Dial for 2 seconds.	<b>"End intercom"</b>	Blue flashing
Start/End Group Intercom	Press the Ambient Mode Button for 1 second.	<b>"Group intercom"</b>	Green flashing	

Type	Operation	Button Command	Voice Command	LED
Music	Play / Pause Bluetooth music	Press the Jog Dial for 1 second.	<b>"Music" / "Stereo"</b>	-
	Track forward/back	Rotate the Jog Dial while pressing.	<b>"Next" / "Previous"</b>	-
FM Radio	FM radio on	Press the Phone Button for 2 seconds.	<b>"FM radio"</b>	-
	FM radio off	Press the Phone Button for 2 seconds.	<b>"FM radio" / "Stop"</b>	-
	Select preset	Tap the Phone Button.	<b>"Next" / "Previous"</b>	-
	Seek stations	Rotate the Jog Dial while pressing.	-	-
Settings	Enter the Configuration Menu	Press the Jog Dial for 12 seconds.	<b>"Configuration"</b>	Solid red
Reset	Factory reset	Press the Phone Button for 12 seconds.	-	Solid red
		Tap the Jog Dial within 5 seconds.		
	Fault reset	Press the Reset Button.	-	-

